

# USER'S MANUAL

---

 


## FX-500

The Fysic FX-500 is an additional number dialler for memory numbers.

You can assign handy photos or symbols to each button, allowing you to call the corresponding person or service by simply pressing a single button. It's also possible to use the number dialler as a "big button" keypad.

### NUMBER DIALLER OVERVIEW

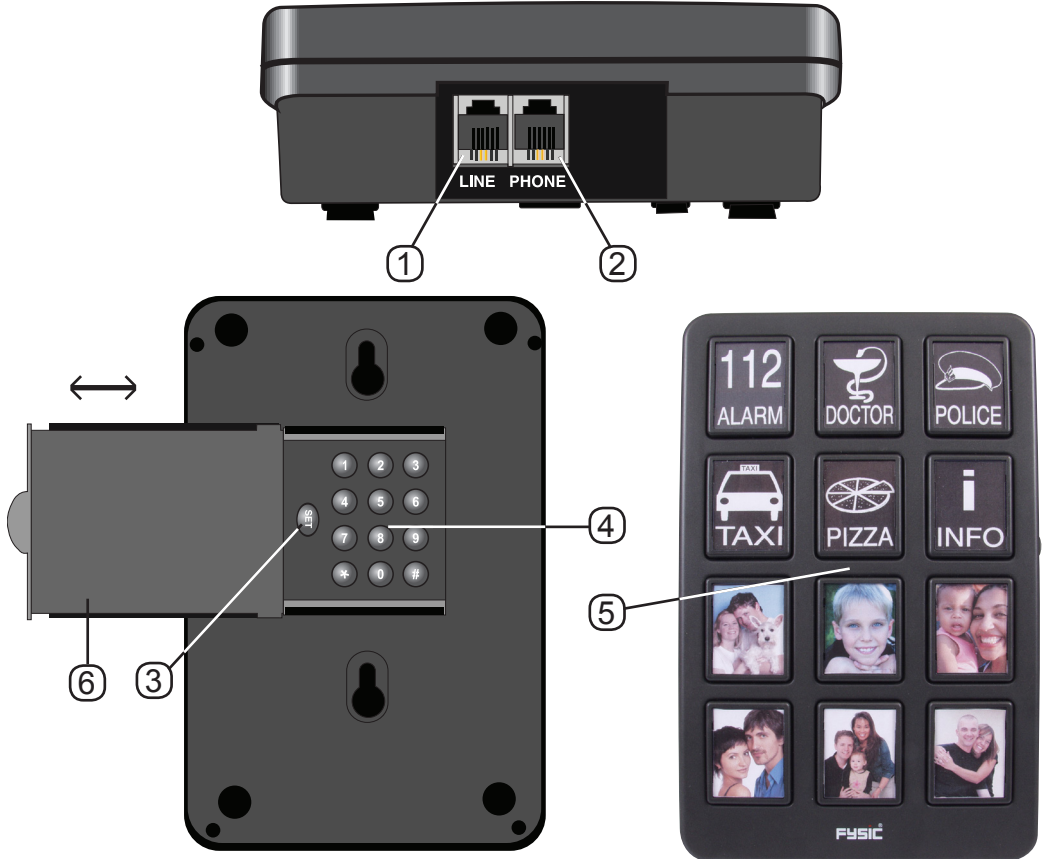


1. Outside line input
2. Telephone or extra number dialler connection
3. Program button
4. Keypad for programming
5. Keypad for dialling memories
6. Protective cover for program buttons

## INSTALLATION

 Remove the (PTT) plug from the PTT socket.

Click the modular plug out of your existing phone and connect it to the 'LINE' input (①) of the FX-500.

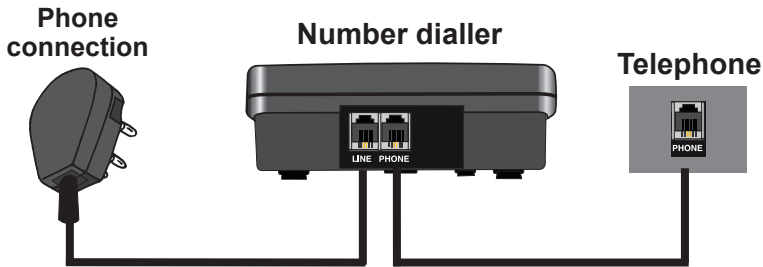

Connect the supplied cable between the connection of your existing phone that's now free and the 'PHONE' output (②) of the FX-500.

You can now put the PTT plug back into the PTT socket.

The FX-500 must be "charged" for at least 2 minutes before you can start programming.

If your existing phone is not provided with a modular connection but a fixed connection, we recommend you to use a connector set such as the Profoon ASN-1.

The FX-500 can also be used as a wall device. Above each other and at a distance of 10cm, drill two holes in the wall and insert plugs and screws. Leave the screws protrude for several millimetres.

Suspend the extra number dialler by sliding the cavities at the rear of the device over the screws in the wall and pressing the FX-500 number dialler downward.

## PROGRAMMING

### To program photo memories:

1. Pick up the receiver of the phone connected to the FX-500 and place it beside the device (if using a wireless phone connected to the FX-500, press the call button of this phone and place the handset on the table).
  2. At the bottom of the FX-500, briefly press the “**set**” button and then enter the phone number you want to save using the keypad at the bottom of the FX-500.
  3. Now press the photo button at the top under which you like to save the number.
  4. Put the receiver back onto the cradle (or press the end button if connected with a wireless phone).
- Repeat steps 1-4 to program the other phone numbers.



### To program as a “big button” keypad:

You can also use the FX-500 as a normal keypad with large buttons. To do this, you don't save an entire phone number underneath a photo button, but only a single digit to be assigned to the corresponding button. Program the number 1 underneath photo button 1, the number 2 underneath photo button 2, etc.

For this application, replace the photo's underneath the buttons with the supplied number pictures (see illustration below).



## OPERATION

### **Photo memories:**

1. Pick up the receiver of the existing phone (or press the call button when using a wireless phone) and wait for the dialling tone.
2. Press the desired photo button on the FX-500.
3. The number will be dialled.

Tip: when calling via a home or office switchboard and having to request the outside line by pressing (for example) the 0 button, pick up the receiver (or press the call button) and use your normal phone to press the 0 button. When you hear the outside line dialling tone, you can press the photo button to dial the corresponding photo memory.

### **‘Big Button’ keypad:**

 
1. Pick up the receiver of your existing phone (or press the call button when using a wireless phone) and wait for the dialling tone.
2. Use the keypad to enter the phone number you want to dial.
3. The number will now be dialled.

## EXTRA NUMBER DIALLER CONNECTION

If a single FX-500 unit is not sufficient, you can connect a second number dialler to expand the memory capacity.

Refer to the diagram for connecting two number diallers.

The programming procedure for the second number dialler is the same as using a single number dialler. After connecting to the telephone network, please wait at least two minutes before you start programming.

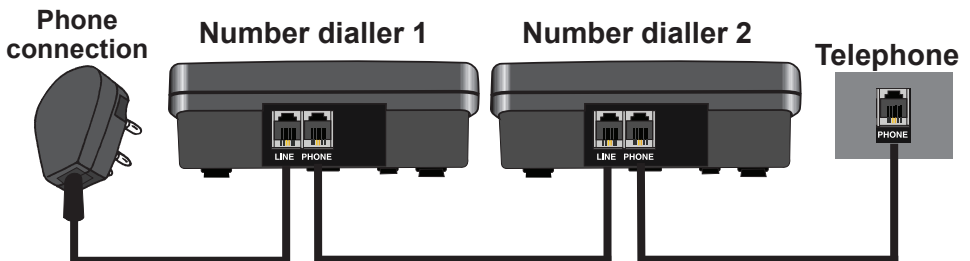

## CHANGING THE BUTTON SYMBOLS


The symbols you see on the button can be replaced with other symbols or you own personal photos.

These photos should be cut to a dimension of 23.4mm x 29.4mm.



Symbols are added for general applications. For memories where photos or symbols are not applicable, you can use a general symbol to which you can assign your own text.

 When using the number dialler as a 'Big Button' keypad, please use the large number symbols.

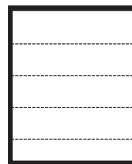


### **Changing photos or symbols:**

Use a sharp object to lift up the protective plastic cover of the button. Remove the old photo or symbol. Place the new photo or symbol picture on the button and then replace the protective plastic cover.


 
## USEFUL TIPS

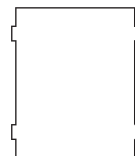

When all of the memories are programmed and you want to move the FX-500, please keep in mind that the programmed memories remain for only several minutes after the telephone connection is interrupted. You could write the programmed memories down on a separate piece of paper as a reminder when programming them again.

## **MAINTENANCE**

Do not place the number dialler in direct sunlight or in humid spaces.

Only clean the enclosure with a moist cloth, never use any cleaning agents.

Do not place the FX-500 on surfaces treated with cellulose, the rubber feet could leave marks.

## **WARRANTY**

For the Fysic FX-500 you have a warranty of 24 months from the date of purchase. During this period, we guarantee the free repair of defects caused by material and workmanship errors. All this subjected to the final assessment of the importer.

### **HOW TO HANDLE:**

If you notice any defect, first refer to the user's manual. Please contact the supplier of this telephone or contact customer service of Fysic on telephone number 073 6411 355.

### **THE WARRANTY BECOMES NULL AND VOID:**

In case of improper use, incorrect connections, use of unoriginal parts or accessories, negligence and in case of defects caused by moisture, fire, flooding, lightning and natural disasters.

In case of unauthorised modifications and/or repairs performed by third parties. In case of incorrect transportation of the device without adequate packaging and when the device is not accompanied by this warranty card and proof of purchase.

All further liability, especially concerning any consequential damages, is excluded.

## DISCARDING THE PRODUCT (ENVIRONMENT)

At the end of the product's life span, it must not be disposed of as normal domestic waste. You must bring it to a collection point for the recycling of electric and electronic equipment.



## DECLARATION OF NETWORK COMPATIBILITY

The Fysic FX-500 is designed for use on the 'public switched telephone networks (analogue single line)' of telephone service providers within the European Union.

For each country or provider, a different connecting cable with plug may be required.

The Fysic FX-500 is in accordance with the essential requirements and provisions as described in the European Directive 1999/5/EC.

## DECLARATION OF CONFORMITY

The declaration of conformity is available on the website [WWW.FYSIC.COM](http://WWW.FYSIC.COM)



Service 		<b>WWW.FYSIC.COM</b> <b>SERVICE@FYSIC.NL</b>	<b>FYSIC<sup>®</sup></b>
Help 		<b>NL 073 6411 355</b> (Lokaal tarief)	
		<b>BE 03 238 5666</b> (Lokaal tarief) (Tarif local)	
		<b>DE 0180 503 0085</b> (Lokale Festnetzkosten)	
		<b>Hesdo, Australiëlaan 1, 5232 BB, 's-Hertogenbosch, The Netherlands</b>	